

## Parts List

Show Available

0

Schematic w/  
Parts List

1

Barrel

2

Crane / Crane

Pivot Assembly

3

Cylinder

4

Center Pin Lock

5

Center Pin Rod

6

Center Pin Spring

7

Cylinder Latch

8

Cylinder Latch Plunger

9

Cylinder Latch Spring

10

Cylinder Release Button

11

Cylinder Release Pivot

12

Cylinder Release Spring

13

Cylinder Release Spring Plunger


14

Disassembly Pin

15

Ejector

16

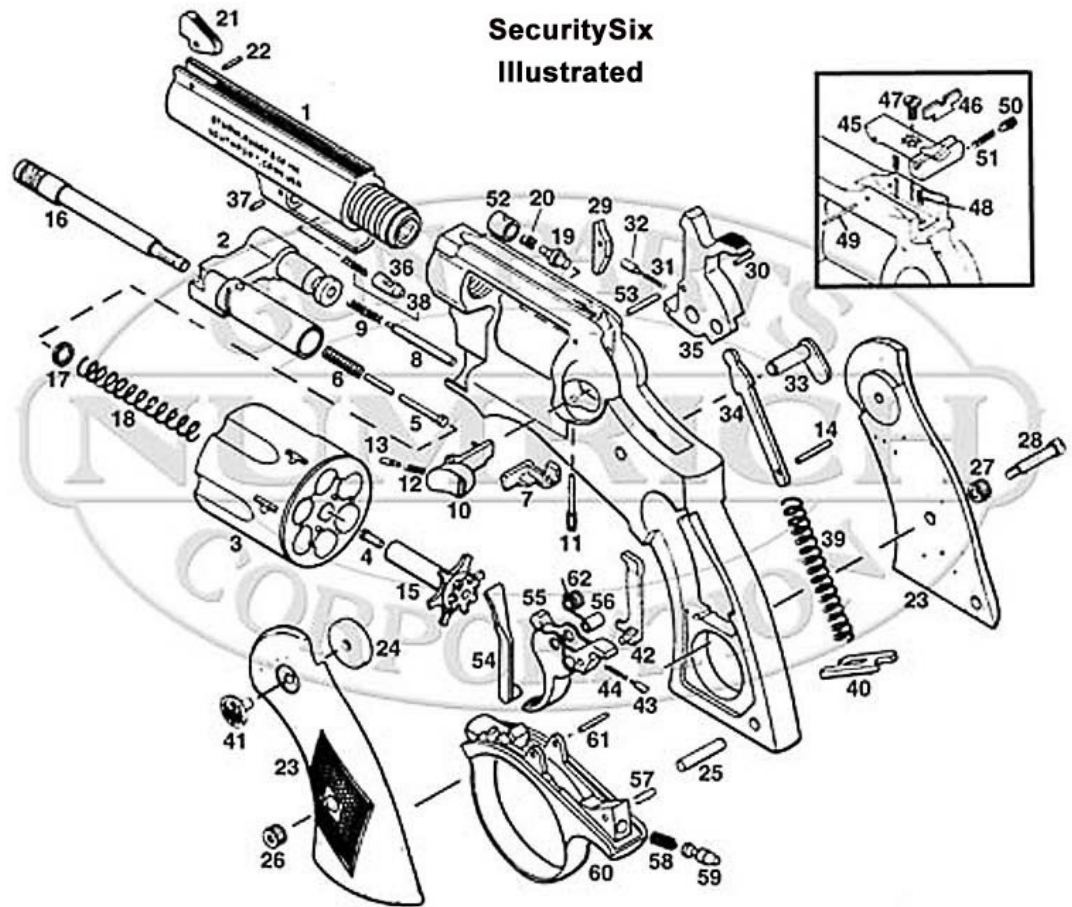

Ejector Rod	17	Front Latch	37
Ejector Rod Washer	18	Front Latch Catch Pin	38
Ejector Spring	19	Front Latch Spring	39
Firing Pin	20	Hammer Strut Mainspring	40
Firing Pin Rebound Spring	21	Mainspring Seat	41
Front Sight Blade	22	Grip Panel Medallion	42
Front Sight Cross Pin	23	Pawl	43
Grips	24	Pawl Plunger	44
Grip Panel Boss	25	Pawl Spring	52
Grip Panel Dowel	26	Recoil Plate	53
Grip Panel Ferrule, Left	27	Recoil Plate Cross Pin	54
Grip Panel Ferrule, Right	28	Transfer Bar	55
Grip Screw	29	Trigger	56
Hammer Dog	30	Trigger Bushing	57
Hammer Dog Pivot Pin	31	Trigger Guard Plunger Cross Pin	58
Hammer Dog Spring	32	Trigger Guard Plunger Spring	59
Hammer Dog Spring Plunger	33	Trigger Guard Plunger	60
Hammer Pivot Assembly	34	Trigger Guard	61
Hammer Strut	35	Trigger Pivot Pin	62
Hammer	36	Trigger Spring	